


Dimensions

Order code	Dimensions	Mounting centres
zc-sceneset-a4	87 / 87 / 13 mm	64 mm
zc-sceneset-c-a4	87 / 177 / 13 mm	80 mm

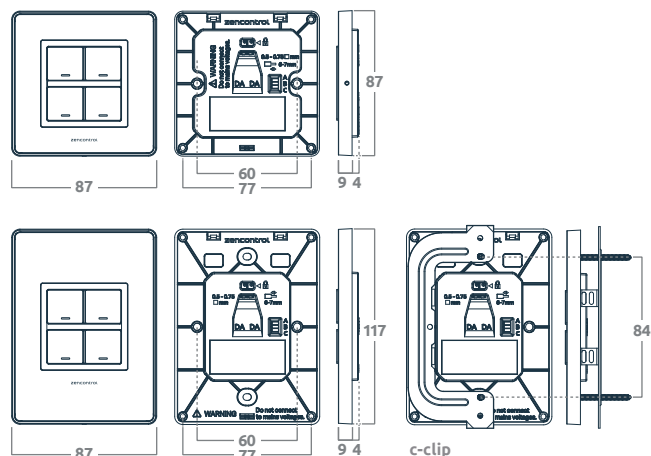


Product range

Order code	Description
zc-sceneset-a4	Standard scene set switch plate to suit 60 mm wall mount
zc-sceneset-c-a4	C-clip compatible scene set switch to suit 84 mm wall mount

Specifications

Supply voltage	9.5 - 22.5 V dc (supplied from DALI)
Supply current	15 mA
Supply	DALI
Control system	DALI-2
Input	1 - 4 configurable momentary pushbutton(s)
Operating temperature	0 to 45°C
Wiring	0.5 - 0.75 mm ² Strip 6 - 7 mm (supplied with 100 mm flylead)
Material	PC UV stabilised, ABS, 316 stainless
Ingress protection	IP20
Input device type	IEC 62386-301

System overview

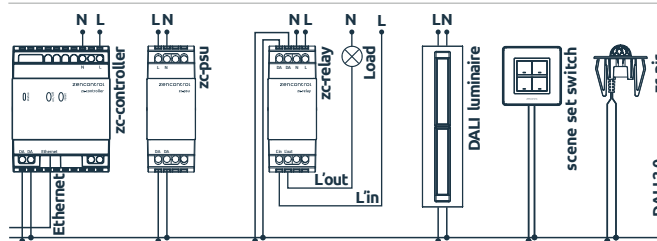


Installation

Remove the product from the box and inspect it for any damage. If you believe the product to be damaged or otherwise unsound, **do not** install the product. Please pack it back into its box and return it to the place of purchase for replacement.

If the product is satisfactory, proceed with the installation:

- 1 Ensure safety warnings are adhered to.
- 2 Select button layout per configuration information overleaf.
- 3 Remove front plate by inserting a two millimetre push-rod into receptacle at the bottom of the frame.
- 4 Attach faceplate to frame by peeling cover off adhesive strips and pressing firmly together. **Note** if the plate has directional artwork please align the top to the two clips on the frame.
- 5 Connect the two DALI terminals to the DALI line ensuring wiring regulations are followed. DALI is not polarised. DALI is not SELV and as such must be treated as LV. **Do not connect the switch to any mains voltages.**
- 6 Mount base using suitable fasteners.
- 7 Install faceplate by aligning top clips and pressing down firmly.

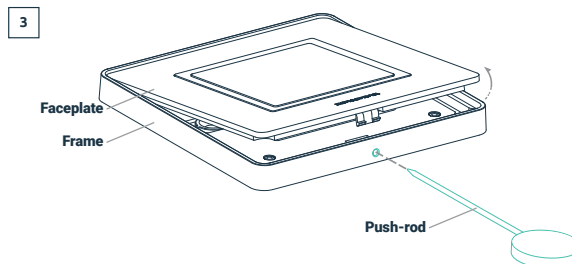

Safety information

- This product must only be installed by a licensed electrician.
- Before commencing installation turn off and isolate the electrical supply.
- There are no user serviceable parts, attempting to service any part of the product will void the warranty
- The switch must not be connected to any mains. It is powered directly from the DALI line.
- DALI is not SELV and as such should be treated as LV.
- As the installer, it is your responsibility to ensure you comply to all relevant building and safety codes. Refer to application standards for the relevant rules.
- When the installation is complete, leave this manual with the building's owner for future reference.
- **Isolate electrical supply before removing faceplate. Circuit-board is NOT isolated.**

Kit content zc-sceneset-a4

zc-scset-btn-4	2 x blank quarter button
zc-scset-frm-mult	2 - 4 button frame to suit square base
zc-scset-fp-st	Brushed stainless faceplate for standard model

Kit content zc-sceneset-c-a4

zc-scset-btn-4	2 x blank quarter button
zc-scset-frm-mult-c	2 - 4 button frame to suit c-clip base
zc-scset-fp-st-c	Brushed stainless faceplate for c-clip model
**Not included	C-clip


Accessory range (sold separately)

Order code	Description
zc-scset-btn-1	Blank single button (requires zc-sceneset-frm-s/-c)
zc-scset-btn-2	Blank half button
zc-scset-btn-4	Blank quarter button
zc-scset-frm-s	Single button frame to suit square base
zc-scset-frm-mult	2 - 4 button frame to suit square base
zc-scset-frm-c	Single button frame to suit c-clip base
zc-scset-frm-mult-c	2 - 4 button frame to suit c-clip base
zc-scset-fp-st	Brushed stainless faceplate for standard model
zc-scset-fp-st-c	Brushed stainless faceplate for c-clip model

Configuration

By default the device is configured with four control device instances with LED indicator. Actual function is dependant on the configuration of a DALI 2.0 application controllers connected to the DALI line.

Button configurations

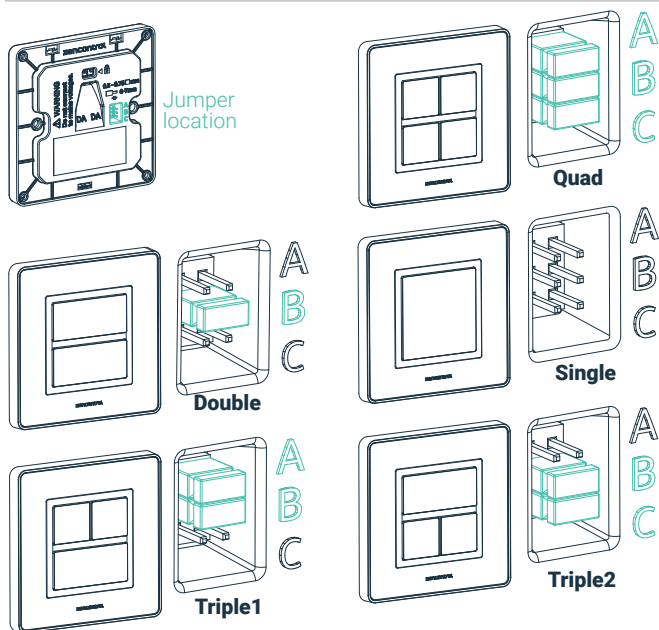


Quad	4 DALI control device instances, everything included in box
Single	1 DALI control device instance. Requires 1x zc-scset-frm-s/-c and 1x zc-scset-btn-1
Double	2 DALI control device instances Requires 2x zc-scset-btn-2
Triple 1 / 2	3 DALI control device instances. Requires 1x zc-scset-btn-2 and 1x zc-scset-btn-4

Wiring diagram

Input configuration



Wire preparation



Notice



For more information on compliant software see our website zencontrol.com

Warranty

The relevant Consumer Law as well as other laws guarantee certain conditions, warranties and undertakings, and give you other legal rights, in relation to the quality and fitness for purpose of zencontrol products.

zencontrol goods come with guarantees that cannot be excluded under the relevant Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. What constitutes a major failure is set out in the relevant Consumer Law.

Nothing in this Warranty purports to modify or exclude the conditions, warranties and undertakings, and other legal rights, under the law.

zencontrol products are warranted for a period of 12 months from the date of delivery of the product, provided the products are properly stored, installed, used and maintained in accordance with the instructions contained within their manual. Products that have been altered in any way or used other than in accordance with their instructions are not covered by this Warranty. This Warranty is not transferrable and is valid only in the hands of the purchaser of the product. The warranty does not cover zencontrol products other than those purchased from authorised zencontrol distributors. Proof of purchase must be provided with any warranty claim. It is recommended that the purchaser attaches their proof of purchase to their product manual.

If you wish to claim under this Warranty, you must, provide the product code and serial number of the product which you believe is defective, and proof of original purchase, your name, address and telephone number and a certificate of installation or other document required by the law for the installation of electrical products in the place in which the product was installed, to support@zencontrol.com within 12 months from the date of purchase. Please note that the Warranty does not cover removal or reinstallation of the product or that part of the product which you believe is defective.

zencontrol's total liability under this Warranty is limited to the cost of repair or replacement of the faulty product. zencontrol may satisfy its obligations under this Warranty in full by repair or replacement of a faulty product.

This Warranty does not apply to consumable items that can be classified as consumable. For the avoidance of any doubt, any and all warranties or conditions which are not guaranteed under the relevant Competition and Consumer Act or the relevant Competition and Consumer Regulations and which are not expressly included in this Warranty as additional warranties or conditions are excluded. This Warranty does not cover loss or damage caused by wear and tear, misuse, incorrect installation or operation, failure to clean and maintain, incorrect voltage or non-authorised electrical connections, adverse external conditions (such as power surges and dips, acts of God, exposure to heat, corrosion, insect or vermin infestation), use of non-authorised or defective parts or globes, or to items that have been repaired other than by zencontrol or a repairer approved by zencontrol.